

Roland FR-4x : Adjust the volume level of backing tracks and recordings

1 push **Menu/write** button (see acc edit) in screen

2 push > **button** (right arrow) 11 times (see System) in screen

3 push **Enter/yes** button

4 push > **button** 9 times (see A. File Lv) in screen

5 use the - or + (**minus & plus**) **buttons** to adjust playback level louder or softer

[You may have to repeat the above process until you find the volume level you prefer.]

[You need to **SAVE** your new setting if you want to have that same audio volume setting the next time the accordion is turned on.]

6 to save your new volume setting: Push and **HOLD** Menu/write button (see Write SYS in screen)

7 Push > **button** (See Save N Y in screen)

8 Push **Enter/yes button** (see: writing, then Complete) in screen