

Jump to new User Program Banks – Roland FR-8x accordion.

1 Turn on USER PROGRAM button. Bank One is now selected. Pick any register tab to change sounds. Look in the LCD screen for the name of the sound. Pick new sounds by clicking on a register tab (1 – 14), or turn the rotor knob to a new sound and push in the knob to select the new sound.

2 JUMP to a new User Program Bank by pushing and holding the < left OR the > right arrow button. Do not push both. While holding the button, watch your LCD screen. When the screen changes to the JUMP screen, let go of the < or > button.

3 Choose the new bank by using the register tabs 1 – 10. (Use the 10 button as the zero key.) Example: if you want to jump to Bank 10, push register 1, then, quickly push register 10. Watch the LCD screen to see BANK 10 in the first window.

4 Choose the register number within Bank 10 in the same manner. Now, all 14 of your register tabs can be used to change sounds within Bank 10.

5 Repeat the process to jump to a new User Program Bank.

Dale Mathis
480-544-6016