

RESET Process Roland FR-4x – Dale Mathis

Use this process if the accordion is exhibiting strange or erratic behavior. Hopefully you have saved your custom SETS and USER PROGRAMS at an earlier time to a USB memory stick. If not, you will lose those settings if you proceed with RESET. The RESET takes the accordion back to the original Roland out-of-the-box settings.

1 Turn On accordion

2 Menu/Write button – see ACC EDIT in screen

3 > button 12 times – see Utility in screen

4 Enter/Yes – see Copy Set in screen

5 > button 12 times – see Factory ALL in screen

6 Enter/Yes – see Sure? N Y in screen

7 Enter/Yes – accordion runs through reset process. When completed, turn OFF accordion

Turn ON accordion. If the problem still exists, your instrument needs Roland service. Contact your dealer or a local Roland service center.

If you had special programming in your accordion – either your own or Dale Mathis Sounds, that programming is now lost. You need to reinstall your special programming from a USB memory stick.

If screen does not show the messages written above as you do this process, you have made an error. Turn off accordion and restart the process.